


The paraffin blocks should follow the following conditions. If the block is not fit with the following conditions, the cost will be charged as dehydration and embedding.

1. Please use brand new wax to embed tissue.
2. There should not have cracks upon or around the tissue.
3. There should not have bubbles inside the blocks.
4. The back of the cassettes should be fully embedded by the paraffin.

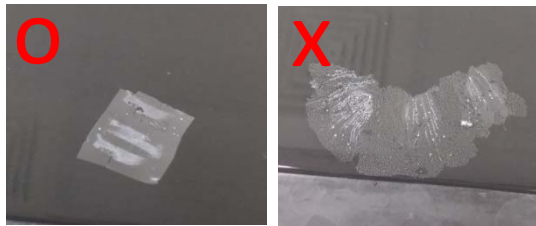

to embed tissue by using reused wax causes the section spread on the water



cracks upon or around the tissue



bubbles inside the blocks



paraffin is not enough on the back of the cassettes